

Holden Commodore VZ Series Steel Return Hose Instruction Sheet.



Ultimate Power Steering Part No - **Hose-17**

For correct fitment of our New Steel return hose the support bracket must be removed from the original hose and re-fitted to the new hose as per photos below.


1. Remove the support bracket by punching or drilling out the rivet with 4mm drill or punch.



To watch a video on how to fit this part please visit our
YouTube Channel - [ultimatepowersteerin](#)

Video name - **How to replace Power Steering Return Hose on
Holden VZ Commodore**

2. Use chisel or screwdriver to pry the bracket open to remove it from the original hose.

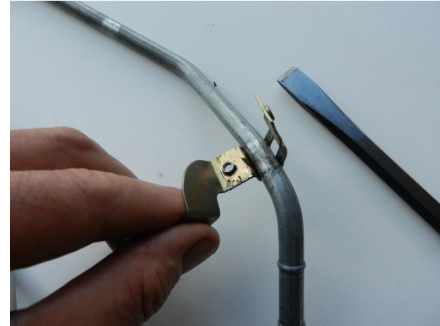

3. Fit the support bracket, use the bolt & nut. Bolt bracket to new hose.



4. Finished photo showing support bracket bolted to new hose-17, ready to be fitted to the vehicle.

